



TOILET BIN

Start out by deciding the right position for the bin. Ideal height from floor to bottom is 8-10 cm. Which makes it easy to clean the floor underneath it.

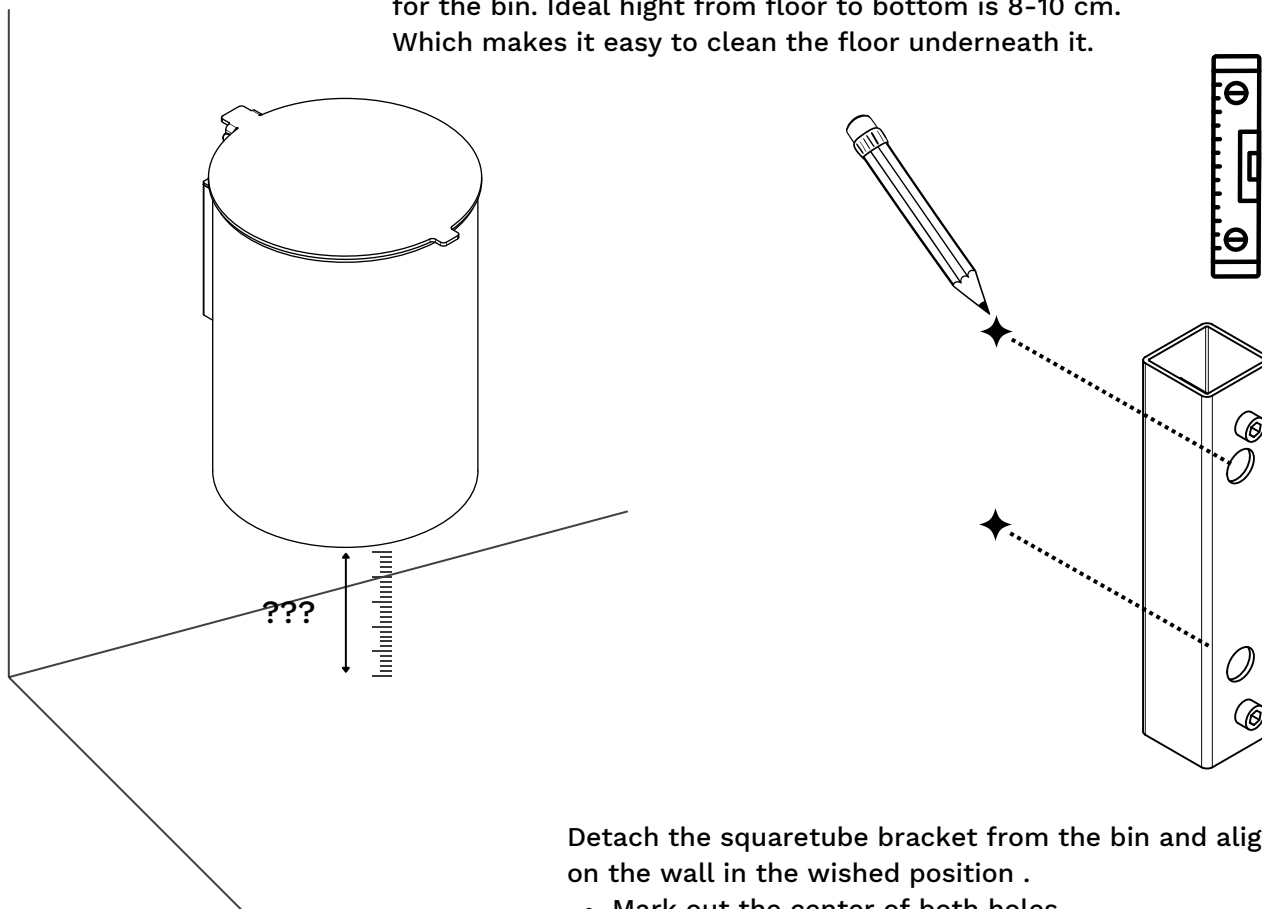

Detach the square tube bracket from the bin and align on the wall in the wished position .

- Mark out the center of both holes
- Drill holes and place suitable anchors for the wall material

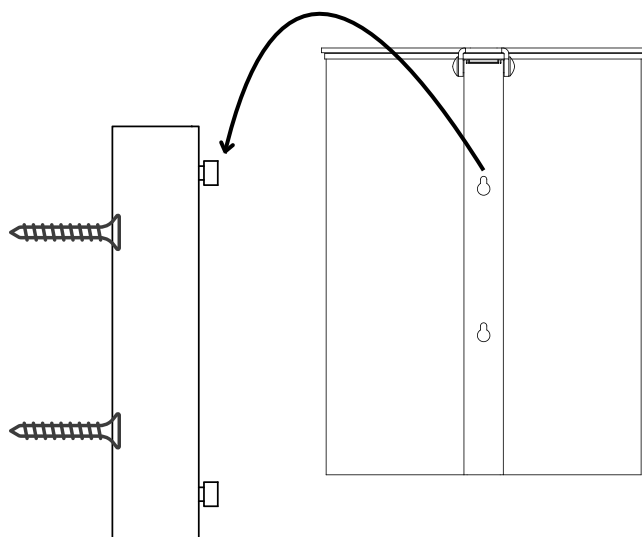

When mounted on the wall, leave the M4 bolts no more than 2mm from surface to slide down the bin through the key-slots. If the bin seems jiggly, try tighten the screws 1 round more.